

Box Contents



Instruction Manual



JGCO x 1



USB UK Plug Adapter x 1

For latest PDF Instruction Manual please go to www.speedfitUFH.co.uk

Product Compliance & Safety Information

Product Compliance. This product is CE compliant and meets the following EC Directives: RoHS2 directive 2011/65/EU, Electro-Magnetic Compatibility directive 2004/108/EC and Low voltage directive 2006/95/EC.

These instructions are applicable to the JG Aura model stated on the front cover of this Instruction Manual only.

Warning. This product must be fitted by a competent person, and installation must comply with the guidance, standards and regulations applicable to the location where the product is installed. Failure to comply with the requirements of the relevant guidance, standards and regulations could lead to injury, death or prosecution.

Warning. Always isolate the AC Mains supply before installing or working on any components that require 230v AC 50Hz supply.

System Overview

Introduction. Thank you for purchasing the Speedfit Aura JGCO Wireless Coordinator. The Wireless Coordinator controls the Wireless communication of your JG Aura system.

We hope you enjoy this product...



Wiring Centre JGWCV



Boiler Receiver JGBR



Wireless Coordinator JGCO



JGSTATW1/JGSTATW2 Thermostat



Wireless Radiator Valve JGTRV

i Please refer to individual device Instruction Manuals for more information.

i The Wireless Coordinator must be used with the JG Aura Wireless range of products below:

Installation



1 USB UK plug adaptor.



2 Attach Coordinator to the plug adaptor.



3 Installation complete.

Installation



4 Insert the adaptor into 230v mains outlet.



6 To commence system installation, press and hold the button for 5 seconds. The button will start to flash indicating that the Zigbee network is ready to accept JG Aura devices.



8 When all devices are paired, press and hold the button for 5 seconds. The button will stop flashing, indicating that the network is closed to new devices.



5 Switch the 230v mains outlet on and ensure the button is illuminated (red) as shown above.

7 **i** Please refer to individual Instruction Manuals.

i **Maintenance** - If replacing or adding JG Aura devices please ensure you follow steps 6 to 8.


Checking System Configuration

i To check that the complete system is communicating and has been configured correctly, you can use identify mode.

i When identify mode is activated, all paired devices will provide a visual indication (see below).



i Press for 1 second to activate identify mode.

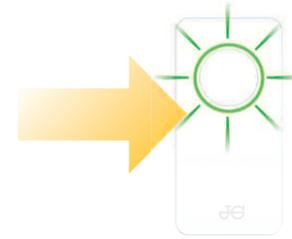

i To exit identify mode, press for 1 second. Alternatively, identify mode will automatically time-out after 10 minutes

