



Please note: The information below displays a typical installation for illustration purposes only.

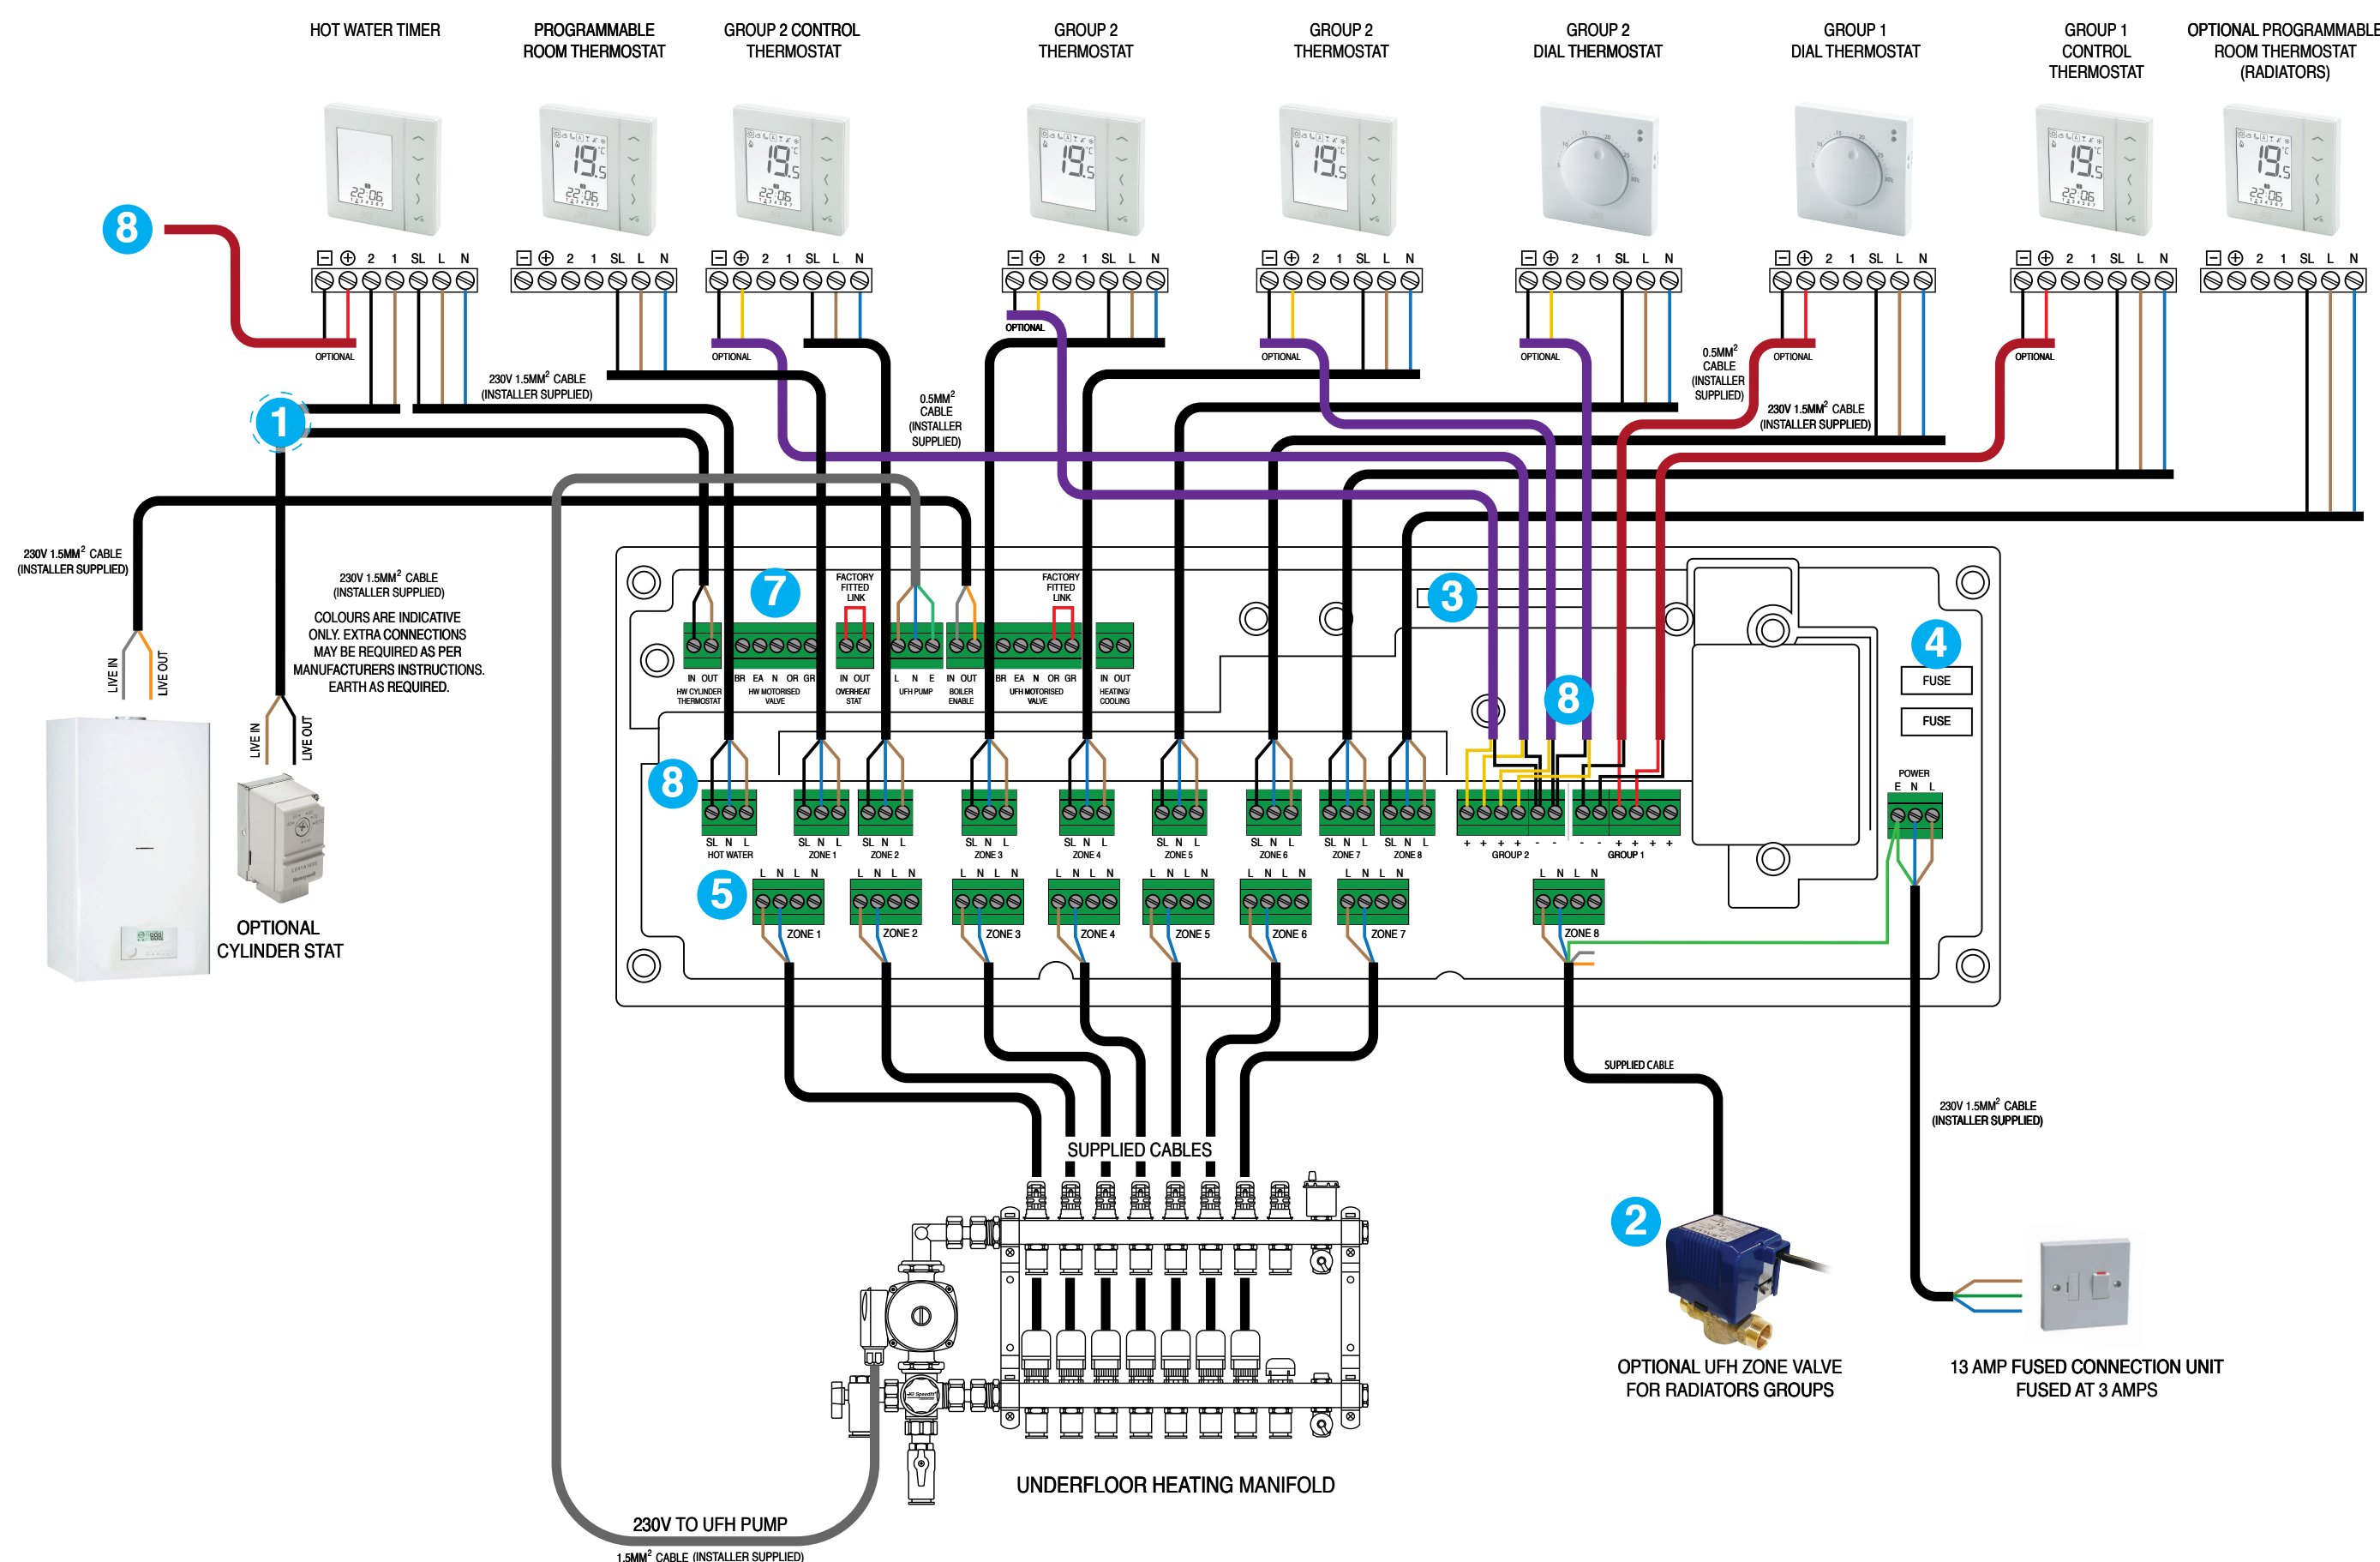

Contents

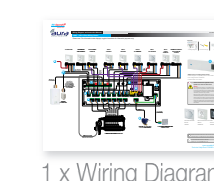

JGWC meets the following EC directives:

- Electro-Magnetic compatibility directive 2004/108/EC
- Low voltage directive 2006/95/EC
- RoHS2 directive 2011/65/EU

Warning

These instructions are applicable to the Speedfit Aura model as stated above.

This product must be fitted by a competent person, and installation must comply with the guidance, standards and regulations applicable to the location where the product is installed. Failure to comply with the requirements of the relevant guidance, standards and regulations could lead to prosecution, injury or death.

Earthing/bonding of all field devices must be in accordance with the aforementioned guidance, standards and documentation.

Always isolate the AC Mains supply before installing or working on any components that require 230v AC 50Hz supply.

Isolation of the mains supply to the JG Wiring Centre via the local fused connection unit MAY NOT isolate all mains voltages present (such as boiler enable).



Please leave these instructions with the end user where they should be kept in a safe place for future reference.

For the latest PDF Instruction Manuals please go to www.speedfitUFH.co.uk

